



Attention, Risk of
Danger, Warning



High Voltage,
Risk of Electric Shock



Double / Reinforced
Insulation



NOT
Litter



CE Mark

TECHNICAL SPECIFICATION



- **Dimensions** : DT109:96x96, DT107:72x72, DT105/DT106:48x96, DT104:48x48mm
- **Panel Cut-out** : DT109:91x91, DT107:68x68, DT105/DT106:93,5x45,5, DT104:45,5x45,5mm
- **Display** : 4 Digits 7 Segment (PV), 4 digits 7 Segment (SV)
- **Sensor Type** : Fe-Const, J type T/C
- **Measuring Scale** : -100 .. 600 °C, J type T/C
- **Resolution** : ± 1 °C or ± 0.1 °C



- **Accuracy** : ± 0.3 % (Over full scale)
- **Control Form** : ON-OFF or P, PI, PD, PID - selectable
- **Out Output** : Relay (NO + NC), 250VAC, 2A, Resistive load
- **Alarm Output** : Relay (NO + NC), 250VAC, 2A, Resistive load, (only NO for DT104)
- **Heat SET** : -100 °C .. Upper Limit °C (H.Set)
- **Alarm SET** : Ab.AL = yes; 0 .. UP.L °C (A.Set)



- **Heat Hysteresis** : 0 .. 50 °C (H.Hys); PID is active if set to 0
- **Alarm Hysteresis** : 1 .. 50 °C (A.Hys)
- **Proportional Band** : 1 .. 130 °C (Pb.C)
- **Integral Time** : 0 .. 30,0 min. (OFF if set to 0)
- **Derivative Time** : 0.. 10,0 min. (OFF if set to 0)
- **Control Period** : 4 .. 200 sec. (Ct)
- **Offset** : -99°C ..+99°C (oFFS)



- **Heating/Cooling** : Only Heating Function
- **Cold. Junc. Comp.** : 0 .. 50 °C (T/C)
- **Sensor Failure** : Heat and Alarms outputs OFF in case of sensor failure, measurement out of range or hardware failure.




- **Supply Voltage** : 100..240VAC, 50-60Hz
- **Power Consumption** : < 8VA
- **Humidity** : 80% up to 30°C, then linearly decreases to 50% at 50°C (non-condensing)
- **Altitude** : < 2000 m





- **EMC** : EN 61000-6-1, EN 61000-6-3 (Only light industrial environment)
- **Safety** : EN 61010-1; Pollution degree 1, measurement category I, (Only light industrial environment, double/reinforced isolated, non-conductive pollution environment)





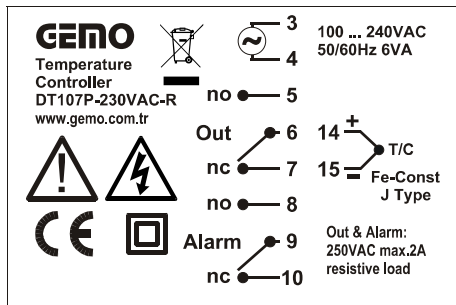



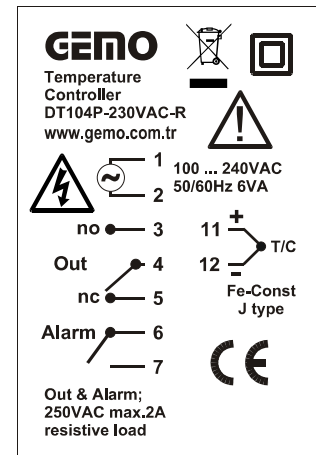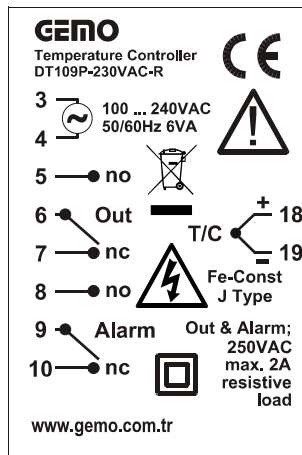
















- **Protection Class** : IP20; according to EN 60529
- **Operation Temp.** : 0 .. 50 °C
- **Storage Temperature** : -10°C .. 60°C (no icing)
- **Weight** : < 0.5 kg
- **Torque for screwing** : Max. 0.5 N.m



no: normally open
nc: normally closed




INSTALLATION, USE and WARNINGS

-  ● This device and its packing is NOT litter and may NOT be disposed of with domestic waste. Please return this device and its packing to an appropriate recycling point at the end of its service life.
-  ● Please read this user manual carefully and completely before installation and use. Please take into consideration all warnings mentioned in this manual.
-  ● DT109P / DT107P/ DT104P are suitable only for permanent panel type mounting
-  ● Installation and use of this device must be done by qualified, authorized and trained technical personnel only.
-  ● Inspect device carefully before installation. Do not install and use broken and defective devices.
-  ● Do not disassemble device. Do not make any repair on any part of the device. There is no accessible part inside the device. Please contact to manufacturer for broken and defective devices.
-  ● Do not use device in environments subject to flammable, explosive and corrosive gases and/or substances.
-  ● This device is designed for applications only in light industrial environments. This device is not suitable for medical and residential use. This device is not suitable for use related with human health and safety. This device is not suitable for automotive, military and marine use.
-  ● Do not allow children and unauthorized people to use this device.
-  ● Before installation and any technical work, disconnect the power supply and mains connections.
-  ● Check the power supply voltage level before power on, and make sure voltage level is in specified limits. Check quality of neutral line. Improper neutral line may give permanent damage to the device.
-  ● Connect an external power switch and an external fuse (1A, 250VAC) to the power supply line that are easily accessible for rapid intervention. Connect an external fuse (2A, 250VAC) for each relay output separately.
-  ● Use appropriate cables for power supply and mains connections. Apply safety regulations during installation.
-  ● Install the device in a well ventilated place. Install the device permanently into a proper panel cut-out. Fix the device with two fasteners supplied with the device. Only front panel must be accessible after installation is completed.
-  ● Do not operate the device other than the environmental conditions given in Technical Specification.
-  ● Do not operate the device in environments that may cause conductive pollution.
-  ● Take precautions against negative environmental conditions like humidity, vibration, pollution and high/low temperature during installation.
-  ● Use correct compensation cables for T/C sensors. Connect T/C cable directly to the device connectors.
-  ● Keep device, signal cables and communication cables away from circuit breakers, power cables and devices/cables emitting electrical noise. Use shielded and twisted signal and communication cables and connect shield to earth ground on device side. Keep length of signal and communication cables less than 3m.
-  ● In your applications, always use separate and independent mechanical and/or electromechanical devices/apparatus to support DT109P / DT107P/ DT104P to handle emergency cases.
-  ● Use insulated cable end-sleeves at the end of cables screwed to the device connector terminals.
-  ● Maximum torque for screwing; 0.5 N.m.
-  ● Please check www.gemo.com.tr for latest device and documentation updates regularly. All updates and all information are subject to change without notice.

GENERAL SPECIFICATION

- This device is designed for basic temperature control applications only in light industrial environments.
- μ P based, PID temperature controller with OUT and ALARM outputs
- Sensor type: Fe-Const J Type T/C
- Selectable control type: P, PI, PD, PID or ON-OFF
- Automatic "Overshoot" elimination in PID mode
- "Anti-windup"
- Upper limit for SET and ALARM settings
- Selectable relative or absolute alarm
- Displays SET and PROCESS values
- Cold-junction compensation for T/C
- Excellent linearity with $^{\circ}$ C/mV look-up tables
- Input "Offset" feature
- Password protection
- High accuracy
- EEPROM memory to store settings
- Easy connection with plug-in connectors


PROGRAMMING PARAMETERS

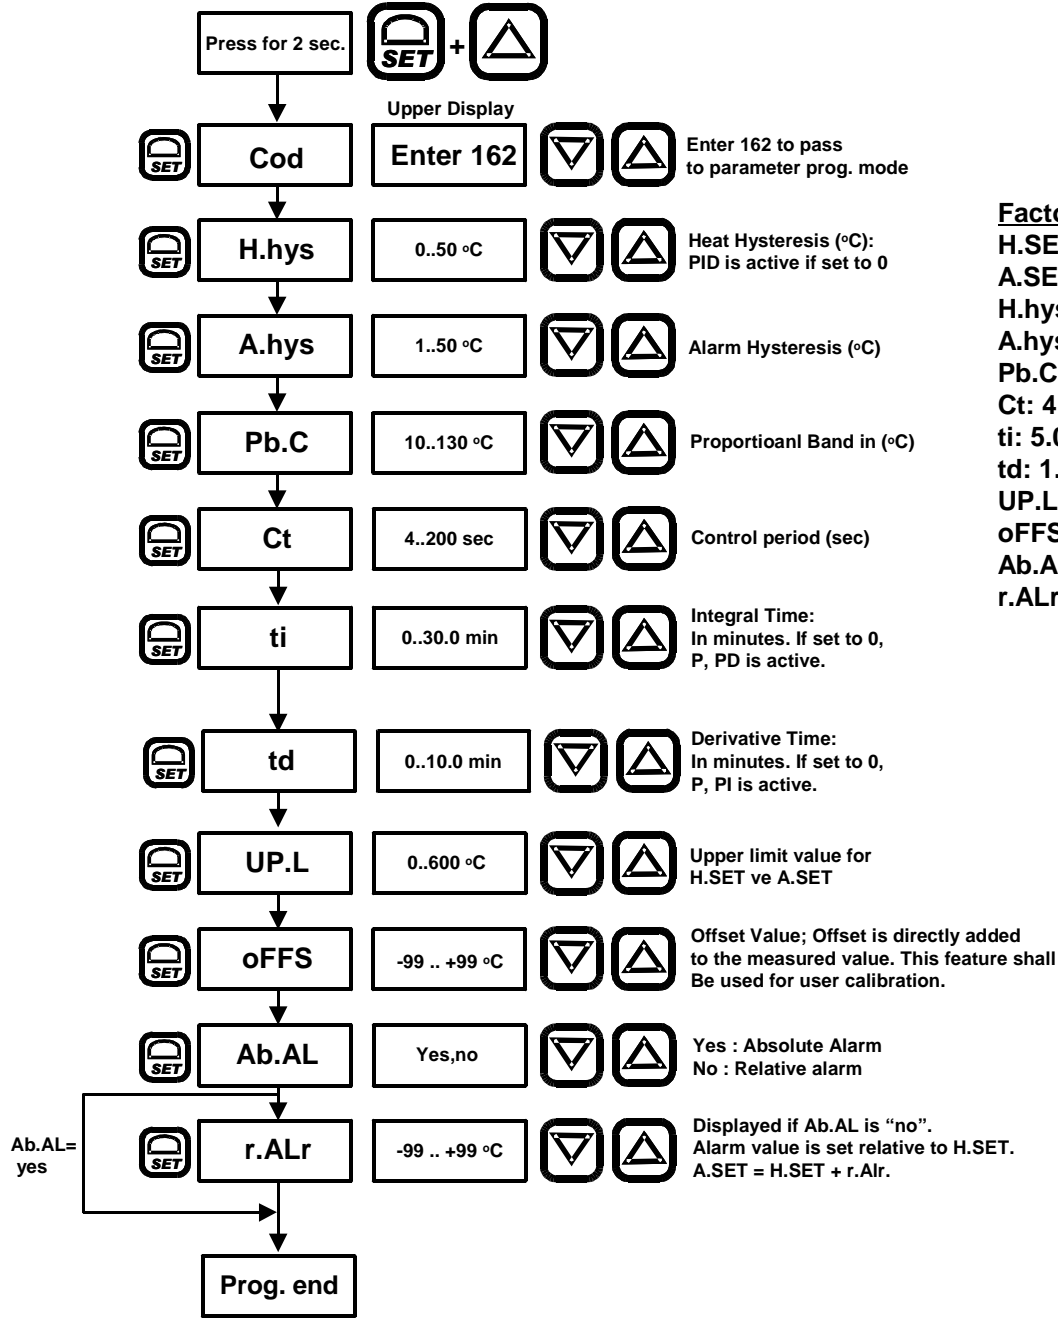


Factory SET Values:

- H.SET: 100 °C
- A.SET: 400 °C
- H.hys: 3 °C
- A.hys: 3 °C
- Pb.C: 30 °C
- Ct: 4 sec
- ti: 5.0 min
- td: 1.0 min
- UP.L: 400 °C
- oFFS: 0 °C
- Ab.AL : no
- r.ALr: 3 °C

PROGRAMMING HEAT SET and ABSOLUTE ALARM SET

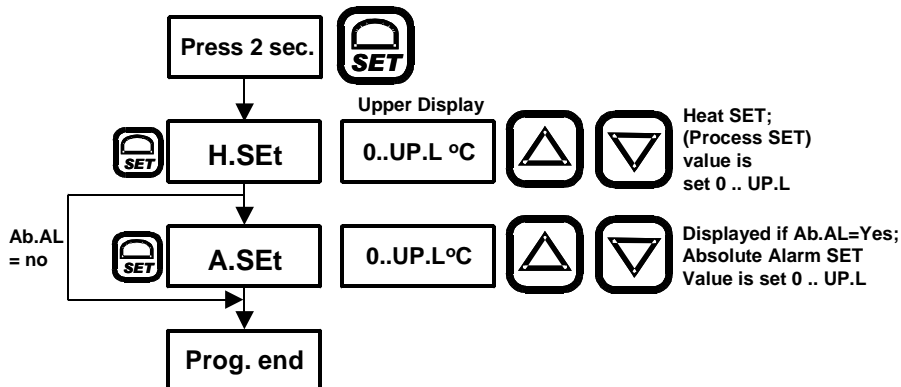


OPERATION; ALARM OUTPUT

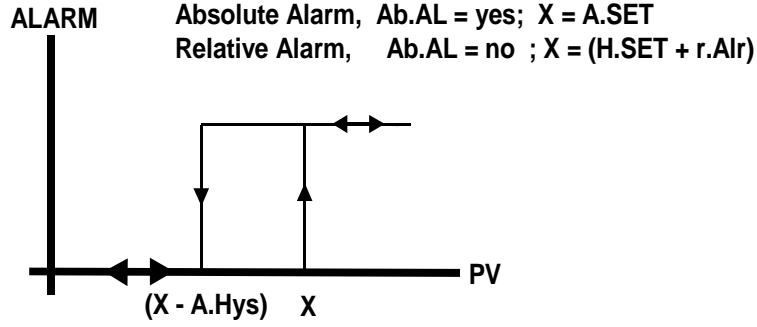

OPERATION; OUT OUTPUT (ON-OFF CONTROL)

- ON-OFF is active when "H.Hys" is other than 0

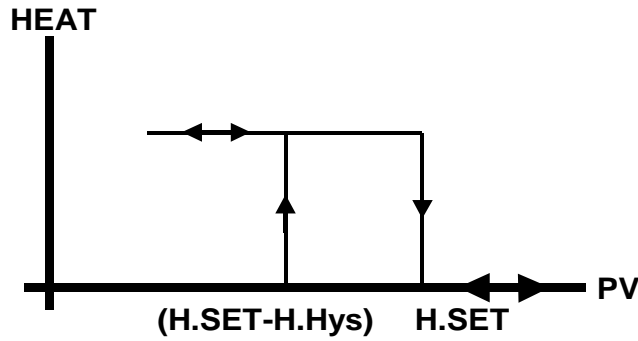

PID PARAMETERS

- **P, PI, PD, PID** is active when "H.Hys" is set to 0
- **PbC**: Proportional band in °C.
- **Ct**: Control period for PID control. Prefer 4-10 sec.
- **Ti**: Integral time; Set in minutes. Determines how fast controller reacts to compensate the offset between SET point and the process value. If set to 0, integral part is OFF. If set too low, process value may oscillate.
- **Td**: Derivative time; Set in minutes. If set to 0, derivative part is OFF. Determines how sensitive the controller is to changes of the offset between SET point and the process value. If set too high, process value may oscillate or overshoot.

ERROR MESSAGE

"**FAiL**": Displays "FAiL" message in case of sensor failure, measurement out of range or hardware failure.

CLAEANING

Do not use any solvents (alcohol, thinners, benzine, acid, etc.) or corrosive substances to clean the device. Use only a dry and clean non-abrasive cloth. Before cleaning, disconnect the power supply and mains connections.

